
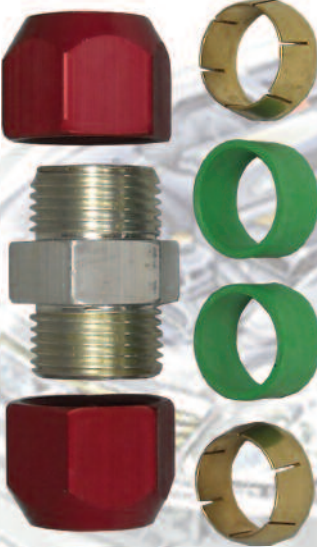










# AIR CONDITIONING LINE SPLICE & BLOCK OFF ASSORTMENT # 0117

<p>76000 5/16" - 3/8" - 1/2" Universal Line Splice</p>  <p style="text-align: right;">1</p>	<p>76002 3/8" Universal Line Splice</p>  <p style="text-align: right;">1</p>	<p>6050 Block off Cap Used with • 76000 • 76001 • 76002 • 76003</p>  <p style="text-align: right;">2</p> <hr/> <p>5031 O-Ring Seal</p> <p><b>MUST BE USED WITH 6050 BLOCK OFF CAP</b></p>  <p style="text-align: right;">2</p>	<p>76011 5/8" Universal Line Splice</p>  <p style="text-align: right;">2</p>	<p>6051 Block off Cap Used with • 76011</p>  <p style="text-align: right;">2</p> <hr/> <p>5032 O-Ring Seal</p> <p><b>MUST BE USED WITH 6051 BLOCK OFF CAP</b></p>  <p style="text-align: right;">2</p>	<p>Red Heavy Duty LOCTITE Thread locker.</p> <p><b>MUST BE USED ON THREAD FOR BLOCK OFF CAPS</b></p> <ul style="list-style-type: none"> <li>• 6050</li> <li>• 6051</li> </ul> 
--	--	--	--	--	--

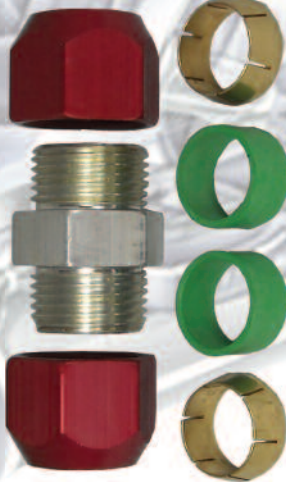**Block Off Cap Installation Instructions For -76000, 76001, 76002, 76003**

- Remove red nut from one end of the line splice.
- Install 5031 O-ring seal on end where nut was removed.
- Apply red thread locker on side that will accept 6050 Block off Cap.
- Finger tighten, using 7/8" (22mm) wrench on nut and torque to max of 25 ft-lbs

**Block Off Cap Installation Instructions For -76011**

- Remove red nut from one end of the line splice.
- Install 5032 O-ring seal on end where nut was removed.
- Apply red thread locker on side that will accept 6051 Block off Cap.
- Finger tighten, using 1" (25mm) wrench on nut and torque to max of 25 ft-lbs




*Automotive Hardware*

Tech Support: 1-800-651-7445 ph: 1-905-335-0327

Fx: 905-335-1829 Email: info@fmsiinc.com

<http://www.fmsiinc.com>

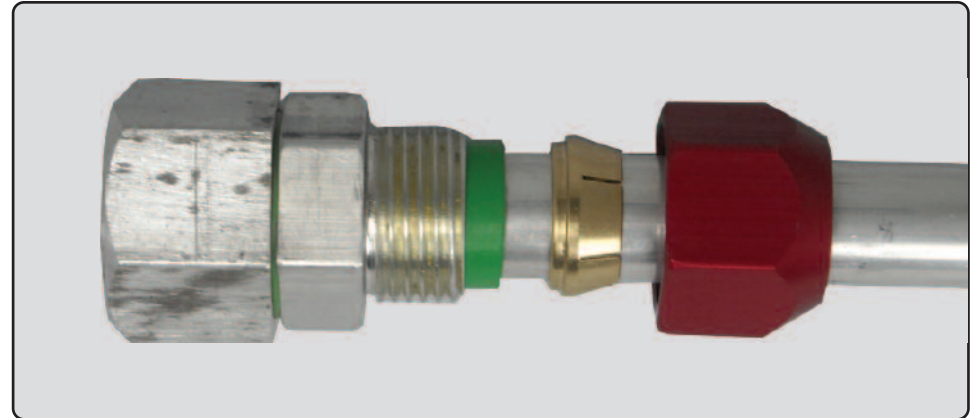

**Block Off Cap Installation Instructions**  
**For -76000, 76001, 76002, 76003**

- Remove red nut from one end of the line splice.
- Install 5031 O-ring seal on end where nut was removed.
- Apply red thread locker on side that will accept 6050 Block off Cap.
- Finger tighten, using 7/8" (22mm) wrench on nut and torque to max of 25 ft-lbs

**Block Off Cap Installation Instructions**  
**For -76011**

- Remove red nut from one end of the line splice.
- Install 5032 O-ring seal on end where nut was removed.
- Apply red thread locker on side that will accept 6051 Block off Cap.
- Finger tighten, using 1" (25mm) wrench on nut and torque to max of 25 ft-lbs